











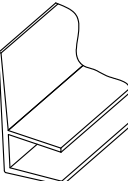
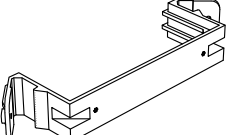






СТАНДАРТ ВЫСОКИЙ

Инструкция по сборке
душевой кабины

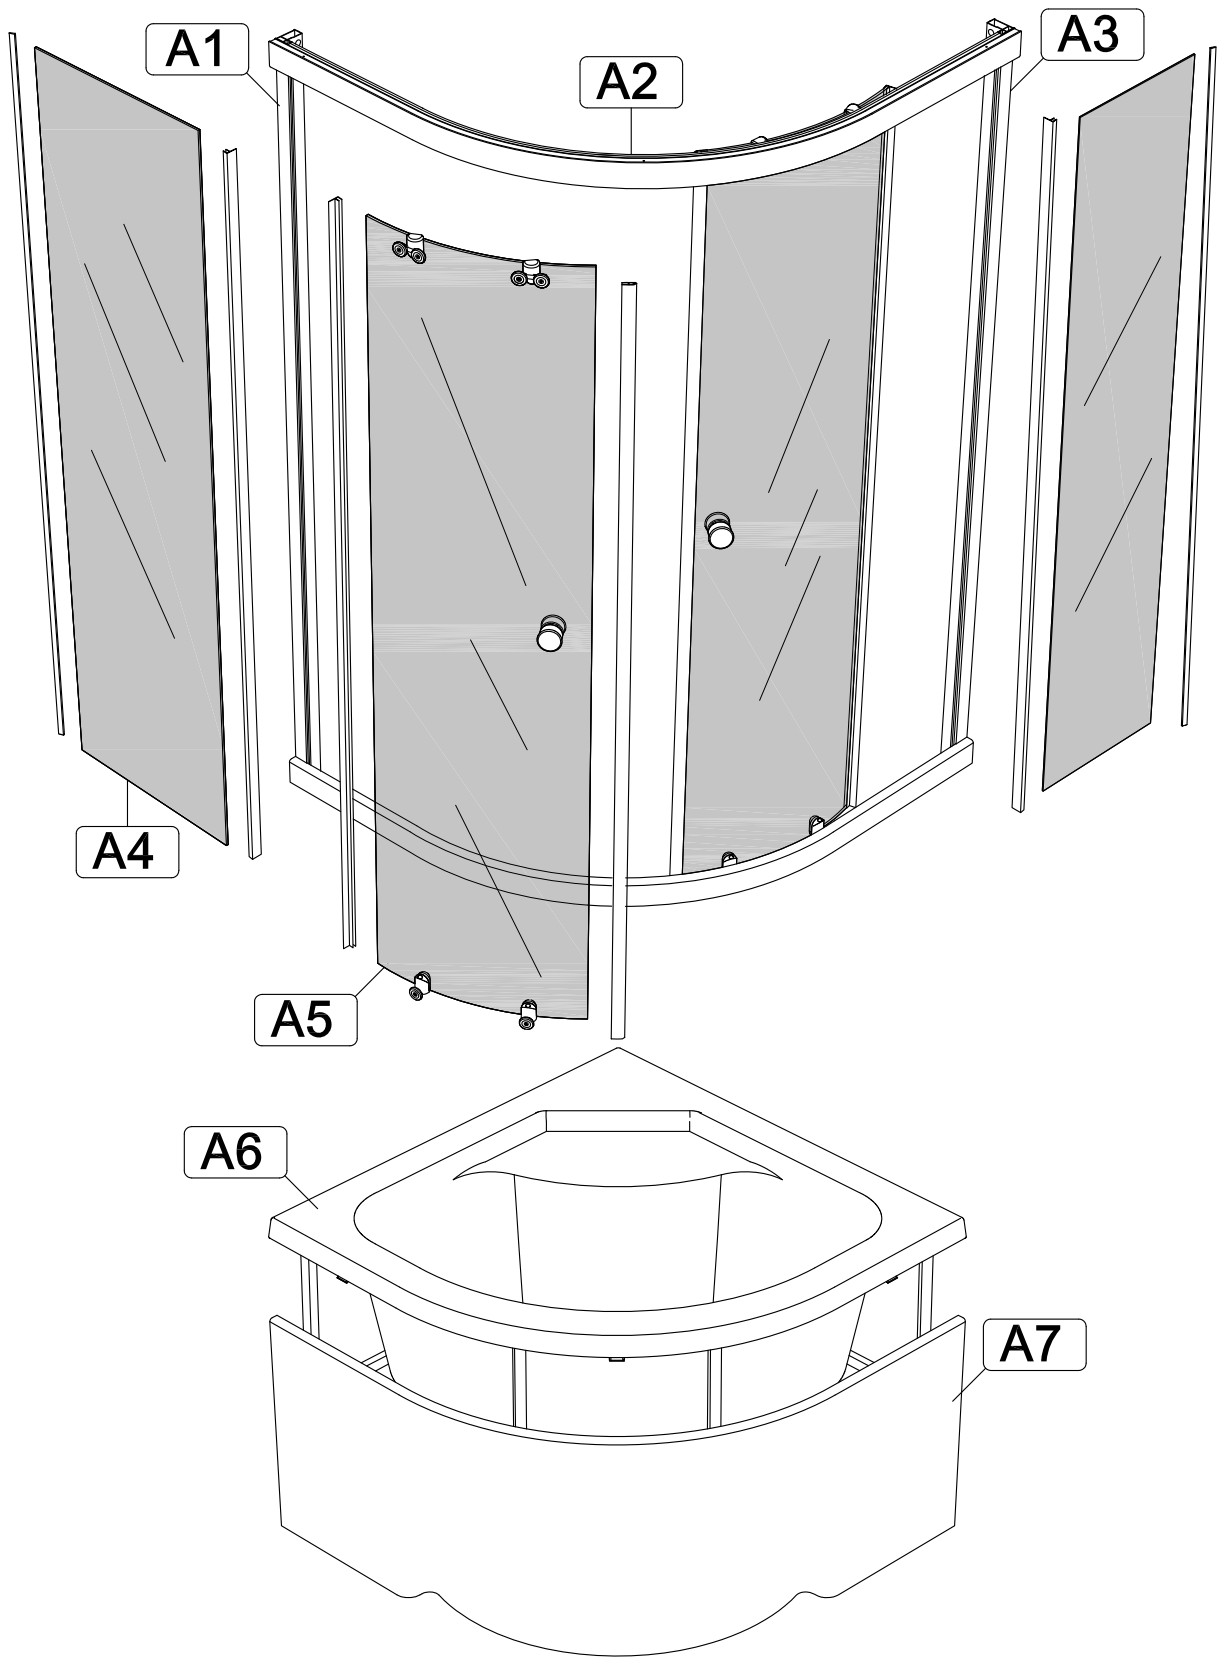


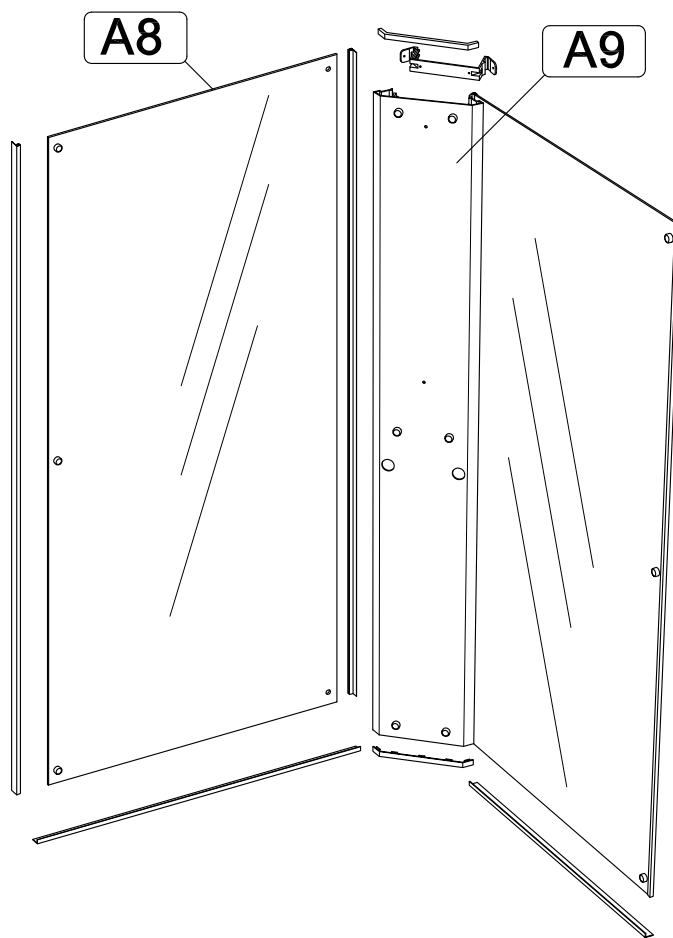

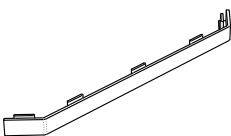

B19  x2	B20  x2			
B21  x12	B22  x12	B23  x6	B24 3.5x19  x12	B25 3.5x15  x6
B26 M3.5  x6	B27  x4	B28  x3	B29 M4  x2	B30 4x25  x2




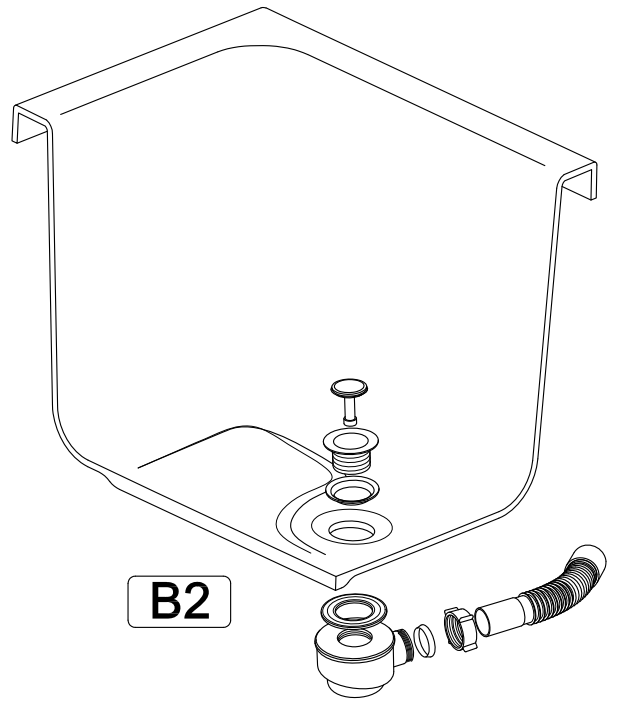
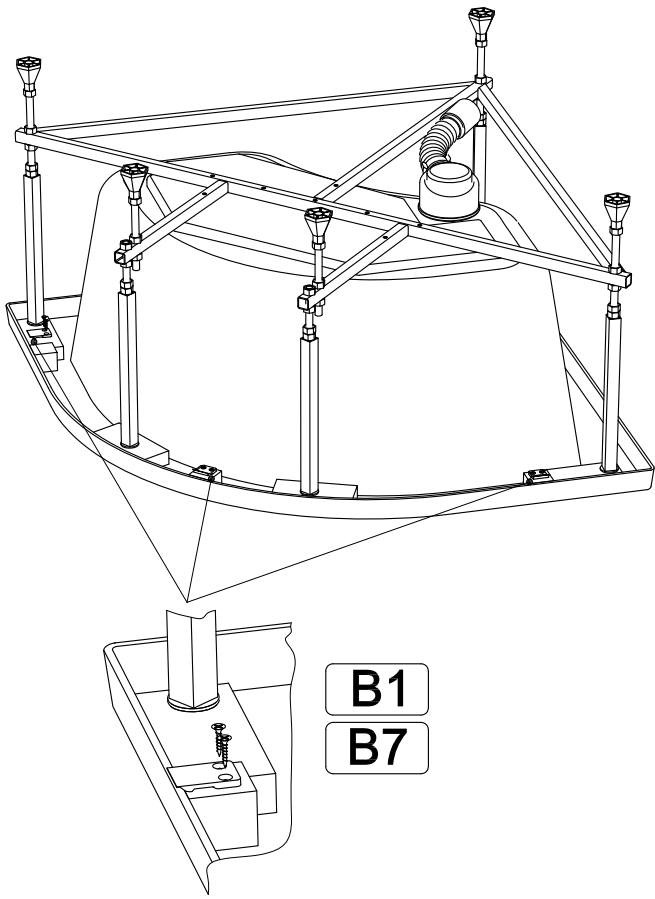



A6 **A2**

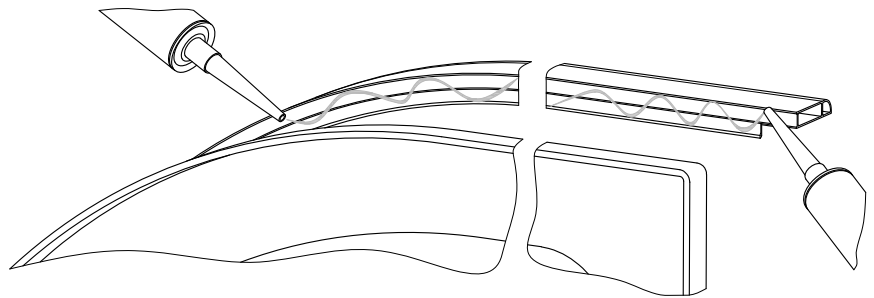


B3
B6

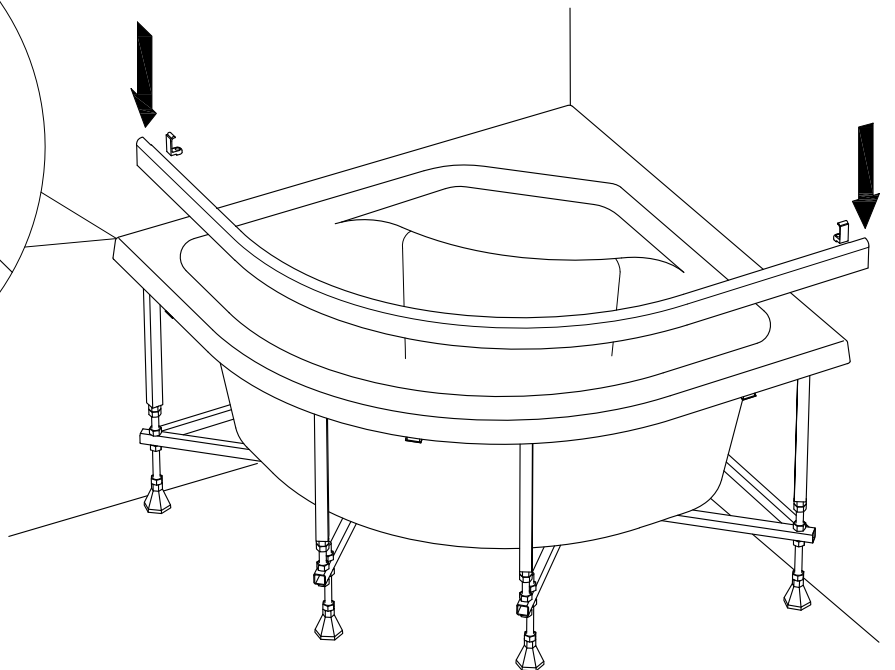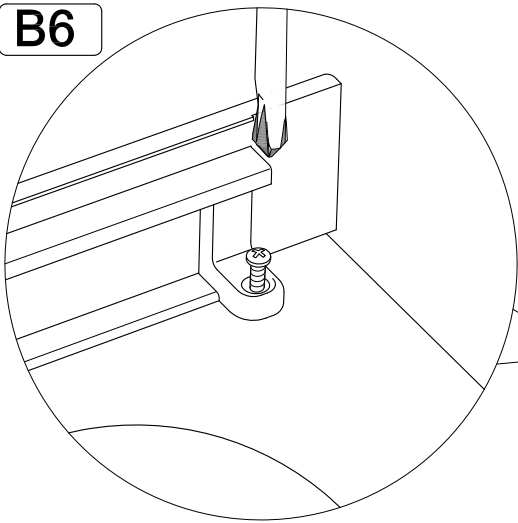

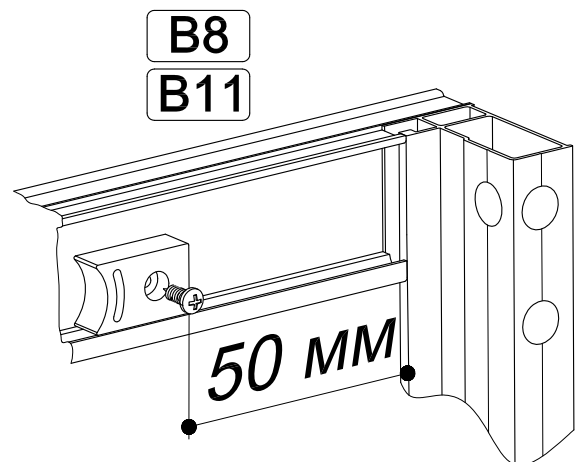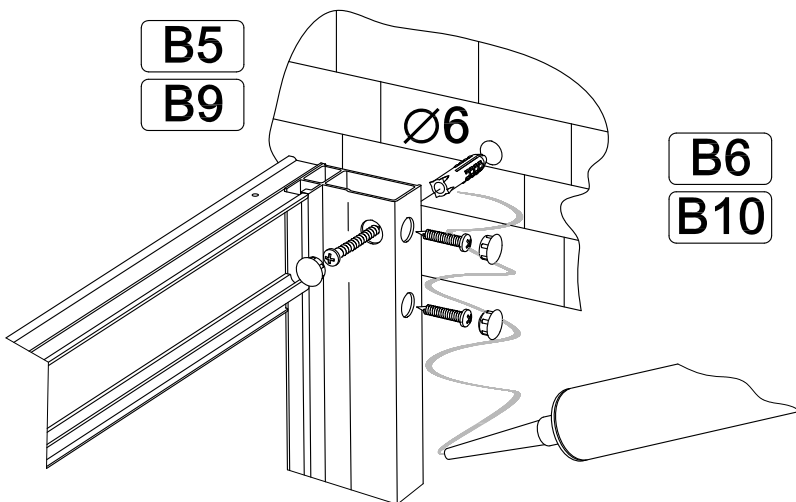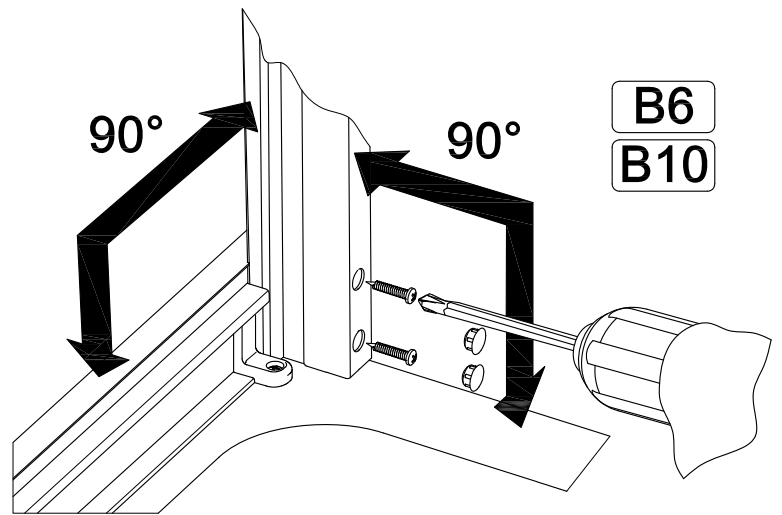
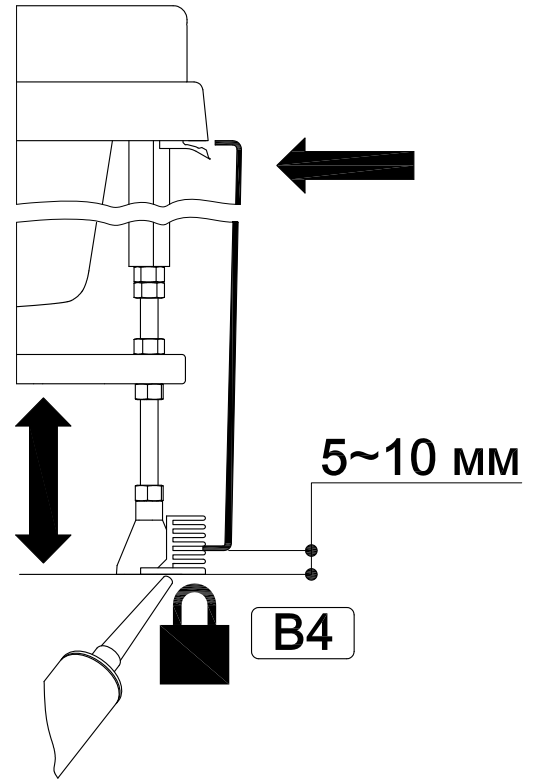
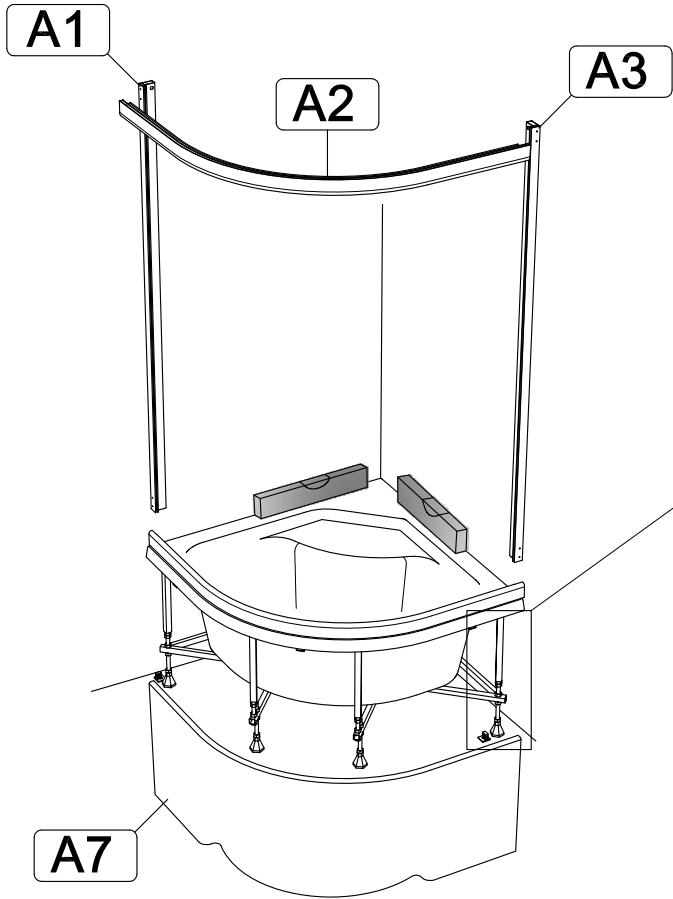


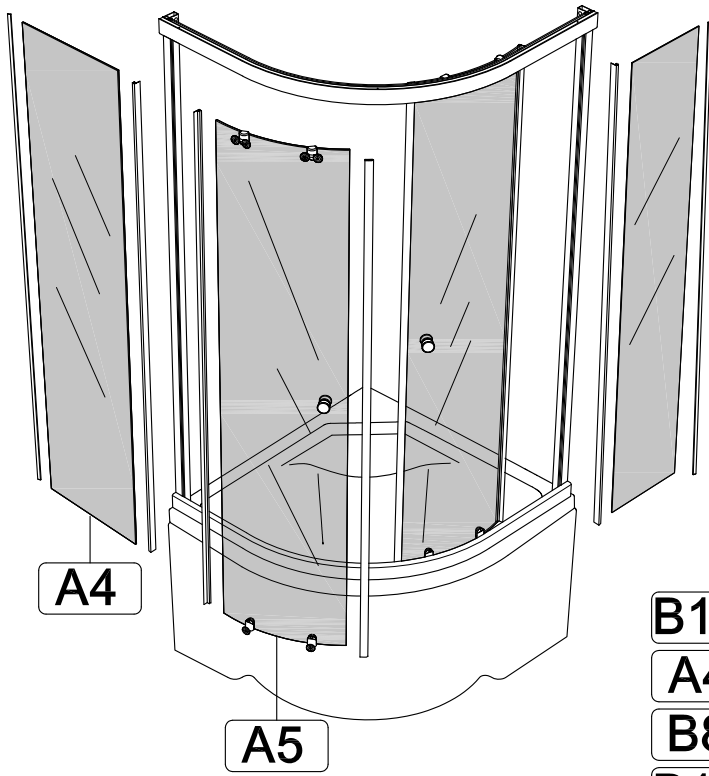


B16 ✂ L=1370
 A4
 B8
 B12

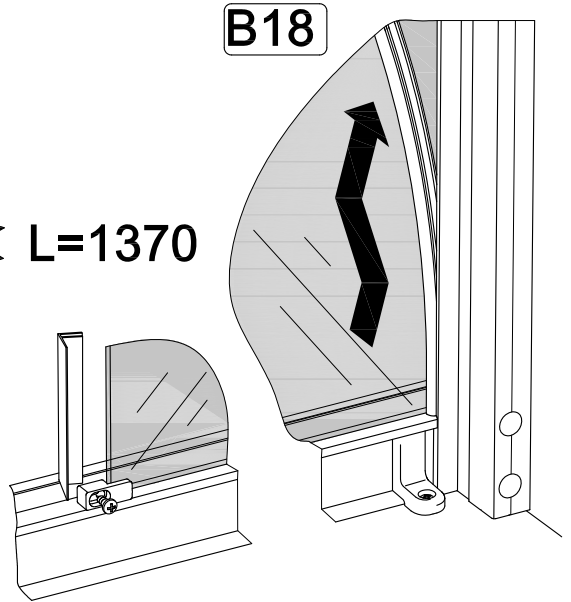

B16 ✂ L=1439

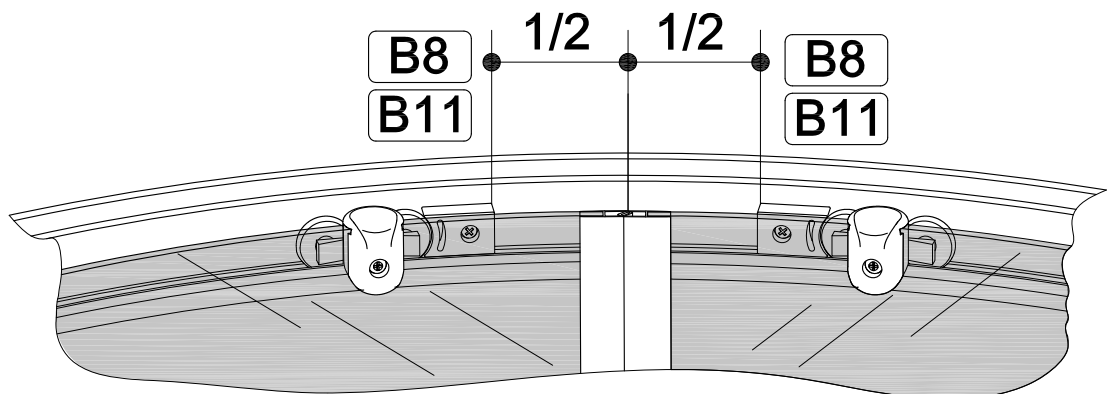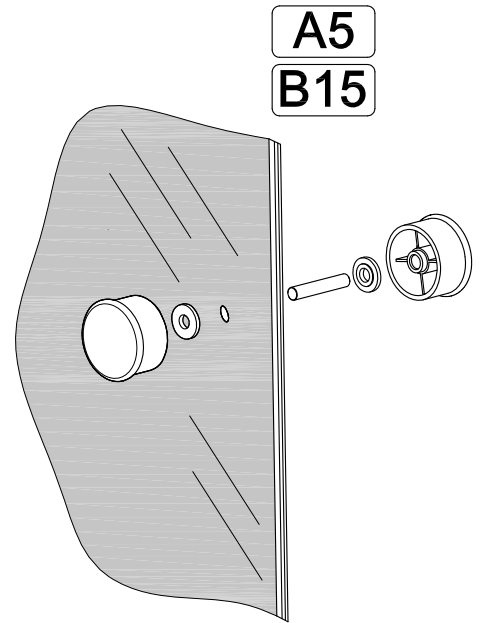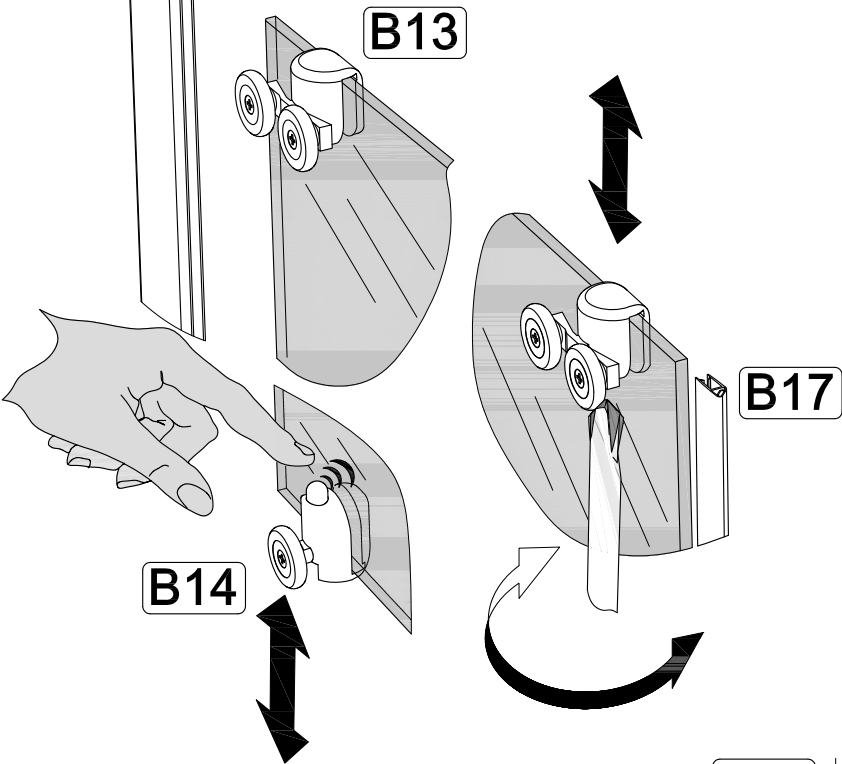

A8

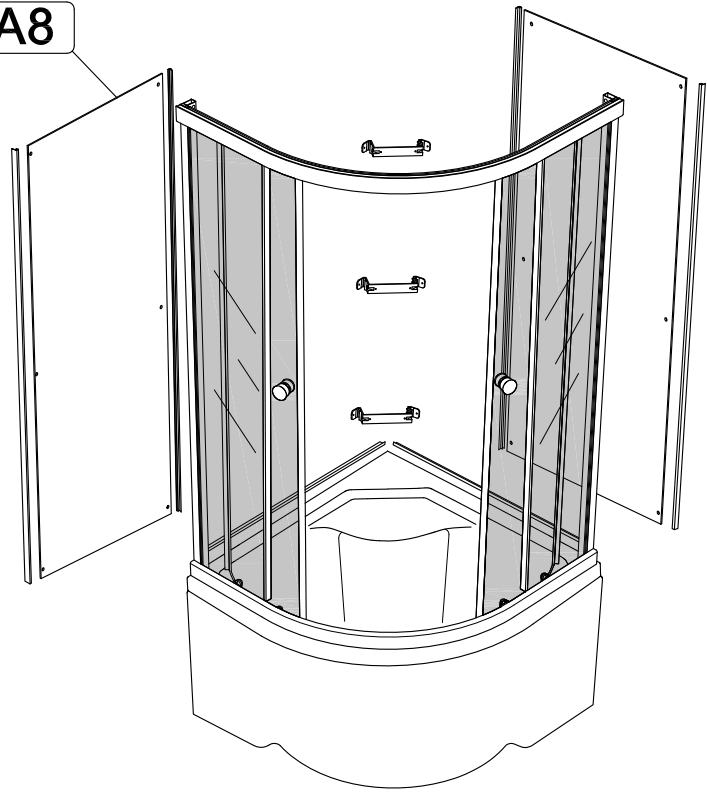


A9



B20

B29



B30

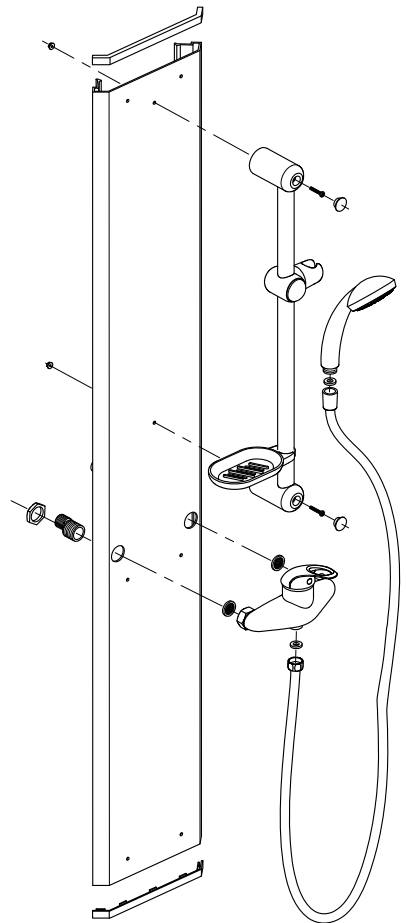


B19

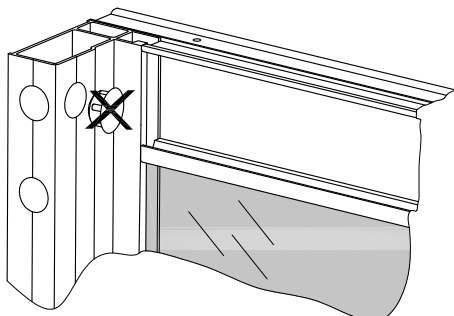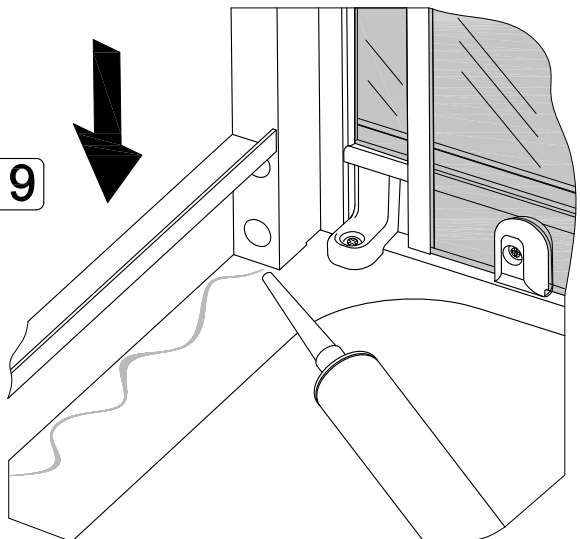


A8

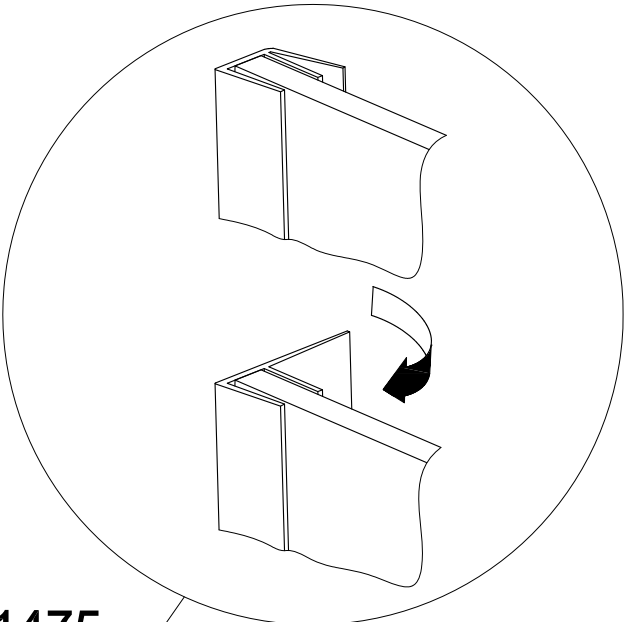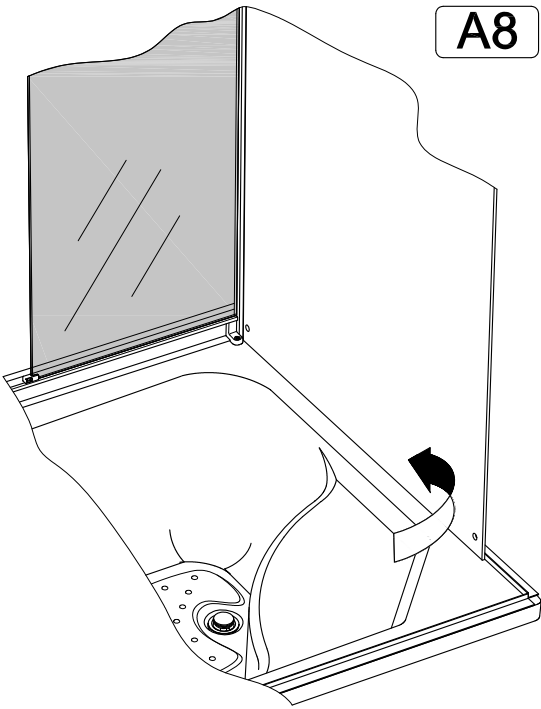

B27 ✂ L=1475

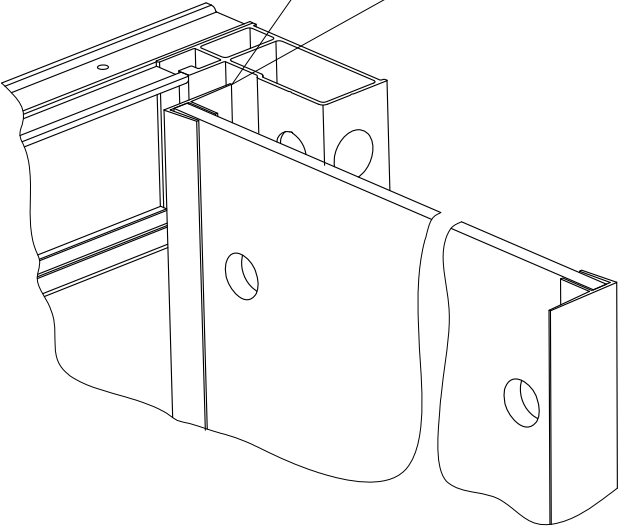


B21
B22
B24

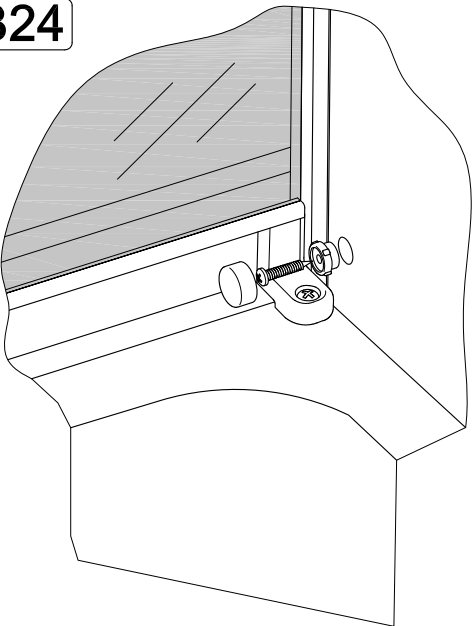


B27 ✂ L=1463

B22
B25
B26
B28

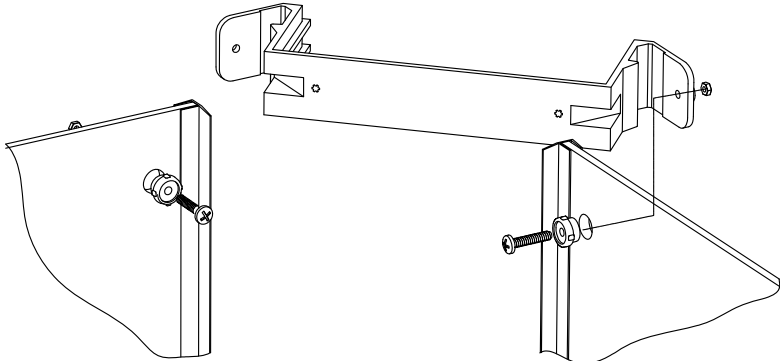




A9

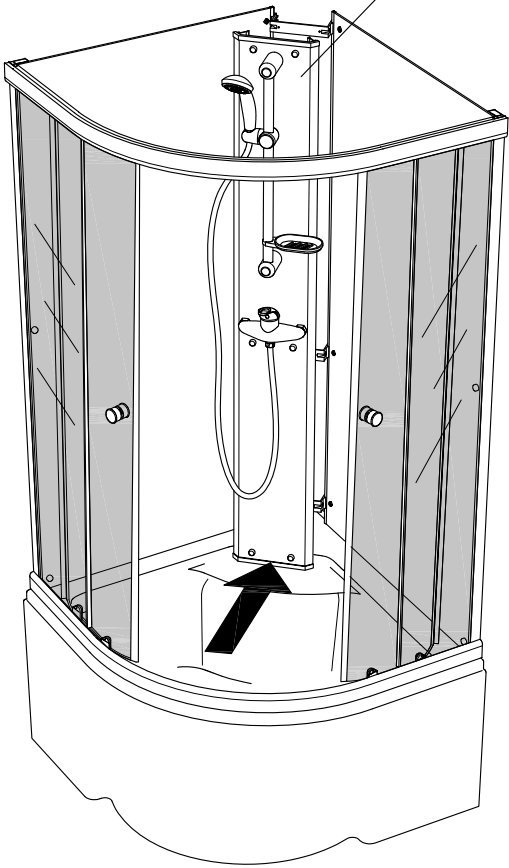

B21

B23

B24

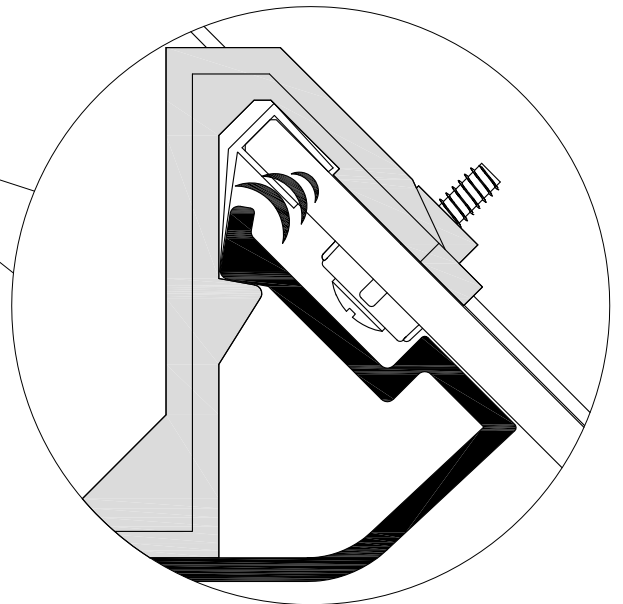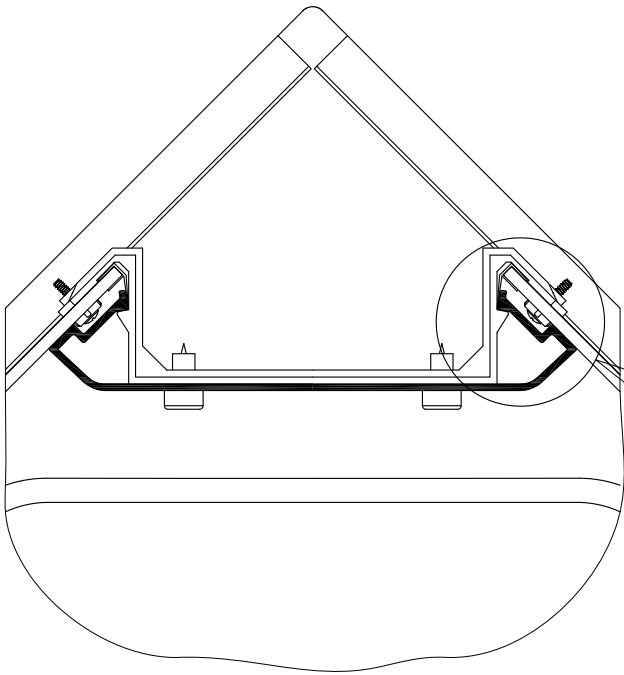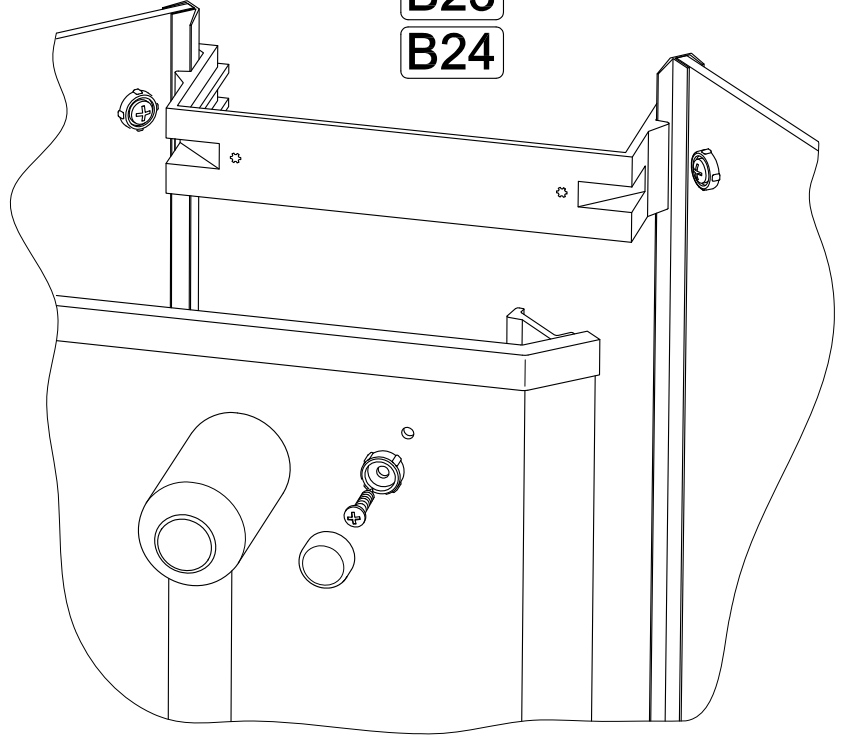

www.3tn.ru