


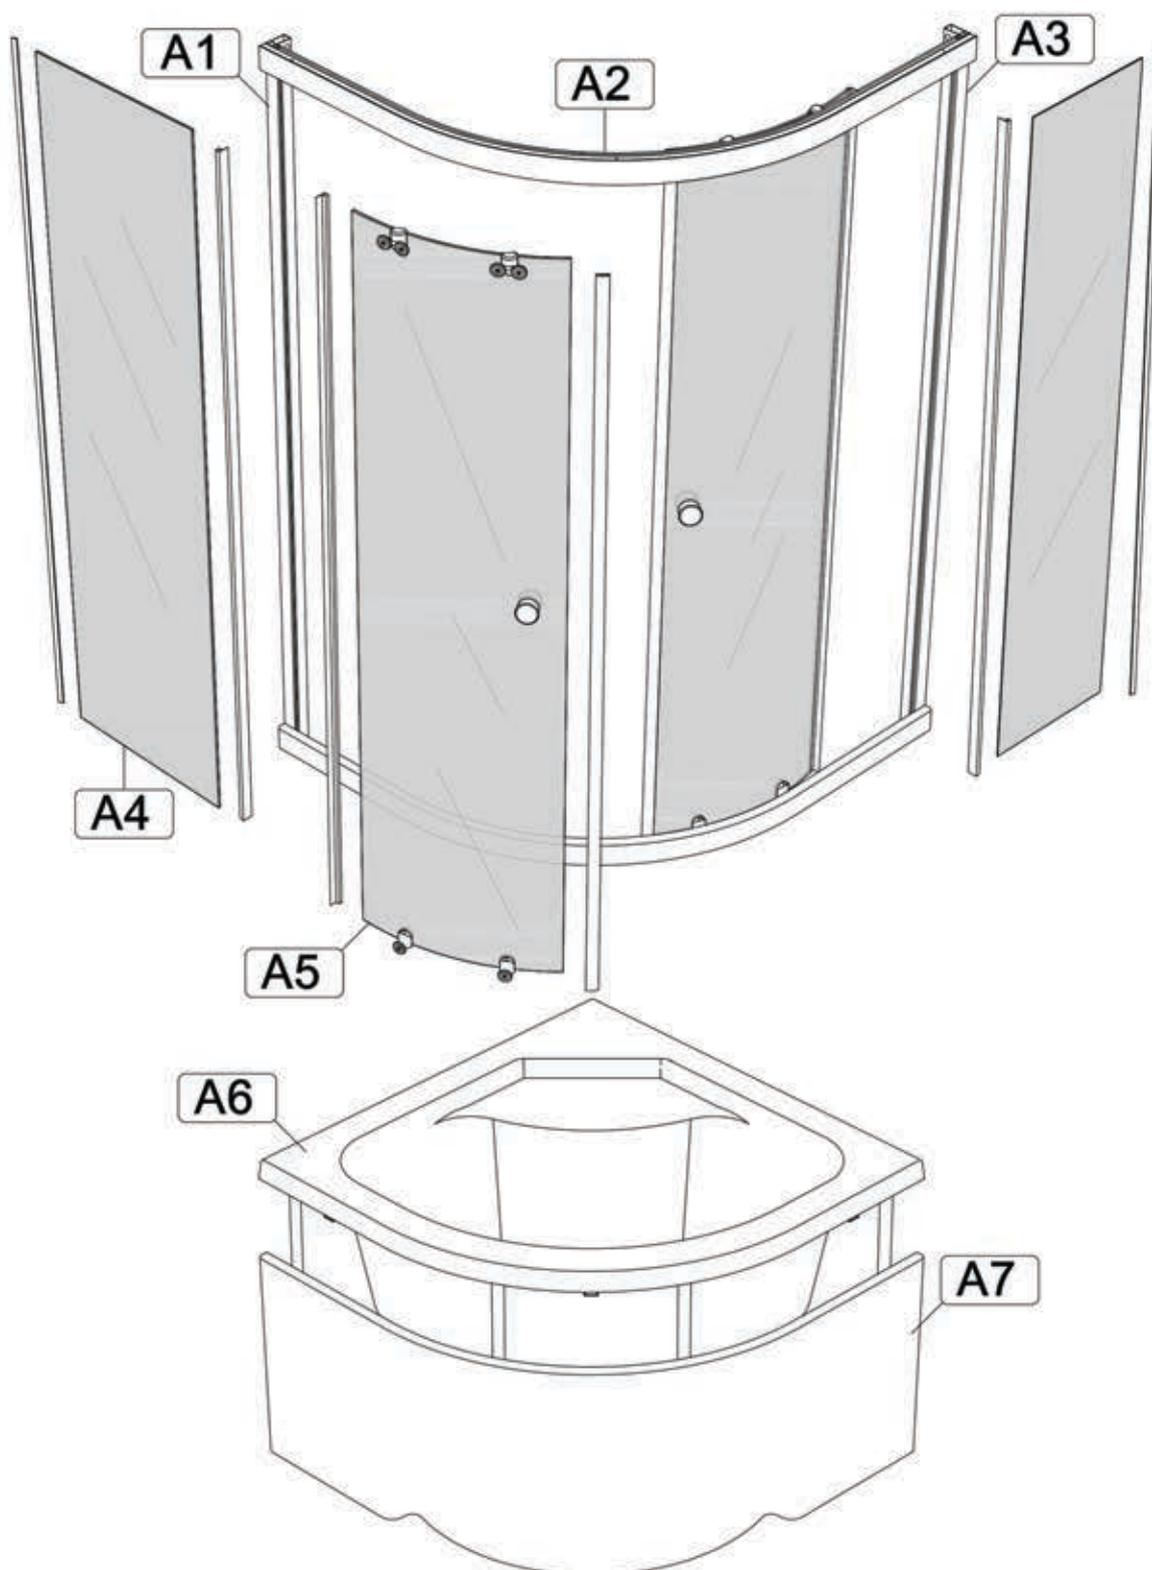
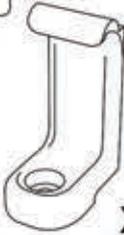
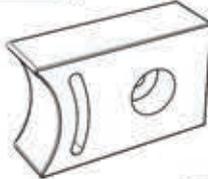

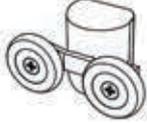
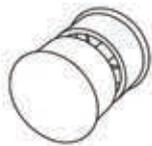
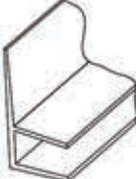
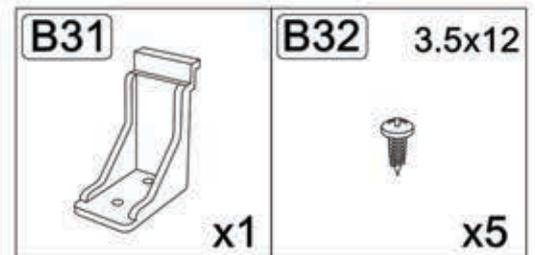
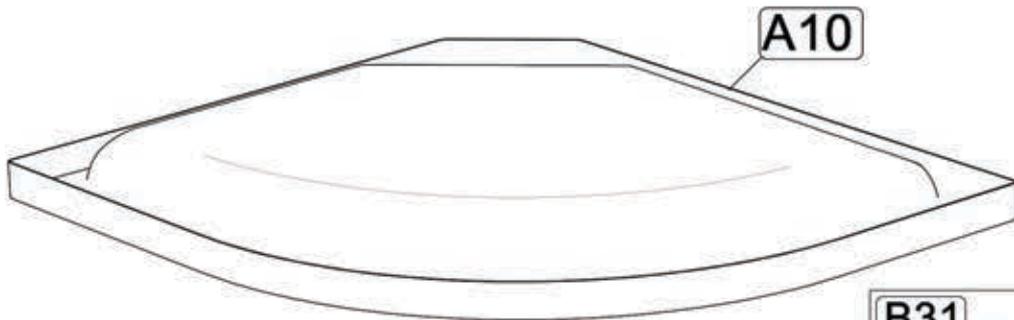
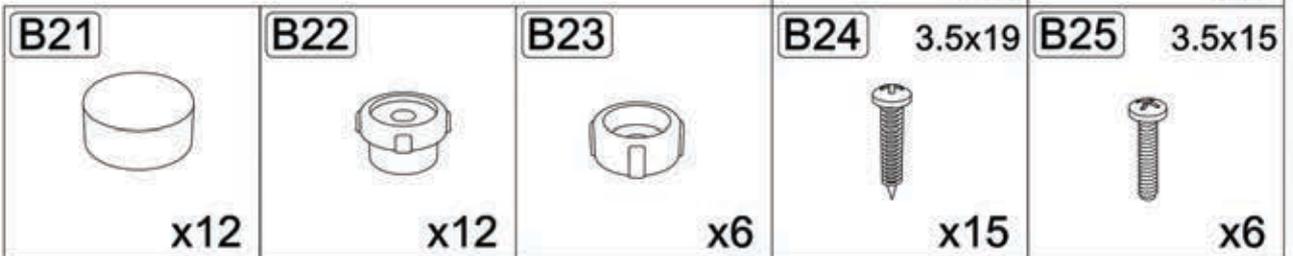
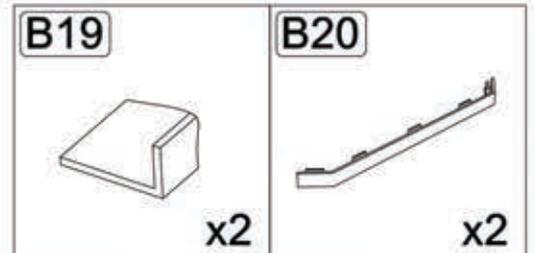


Инструкция по сборке душевой кабины
СТАНДАРТ/РИФ ВЫСОКИЙ ПОДДОН

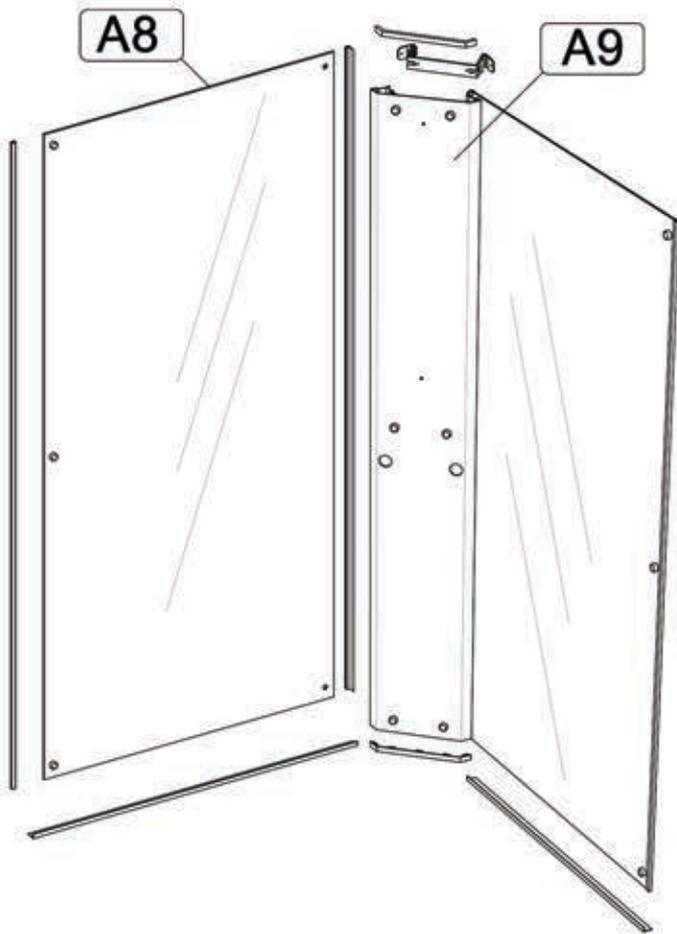


		B1  x2	B2  x2	B3  x2
B4  x2	B5  x3	B6 3.5x50  x2	B7 3.5x19  x11	B8 3.5x12  x10
B9 6x50  x2	B10  x10	B11  x6	B12  x4	B13  x4
B14  x4	B15  x2	B16  x4	B17  x2	B18  x2


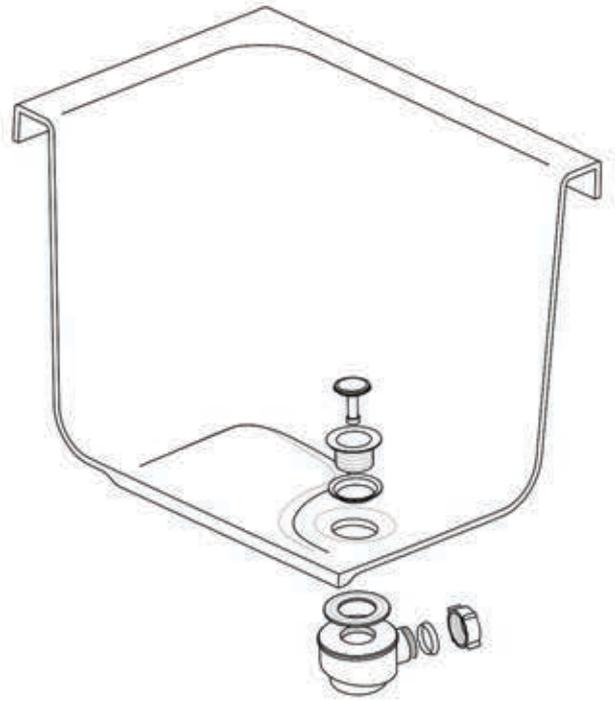


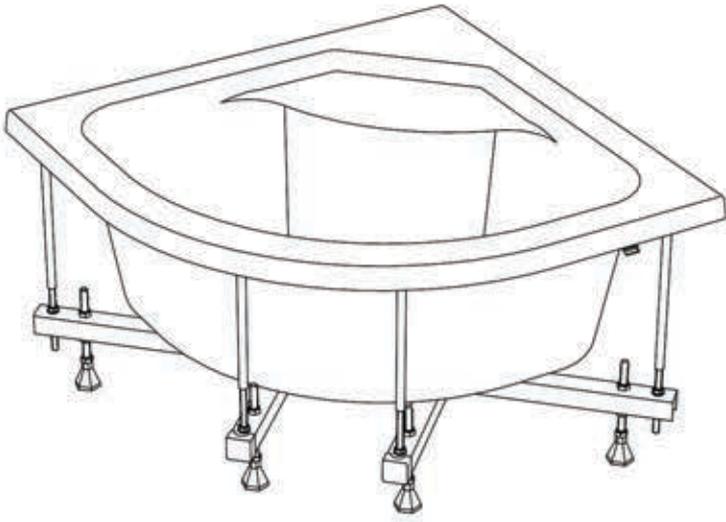


A6 A2


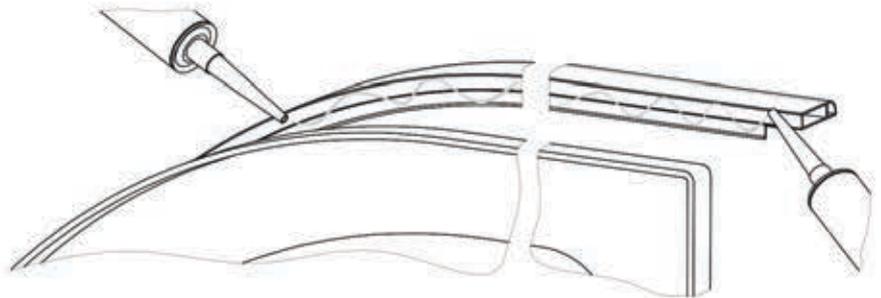


B5
B7

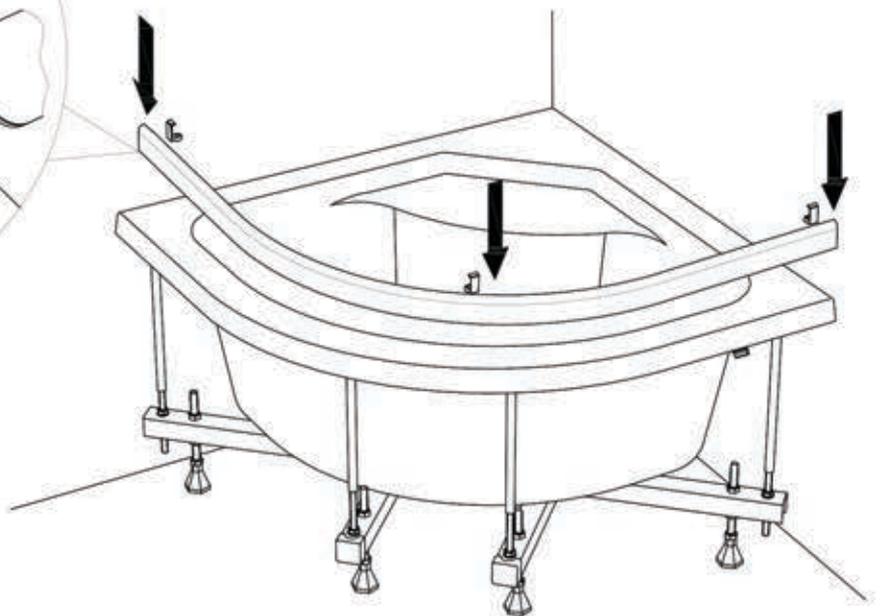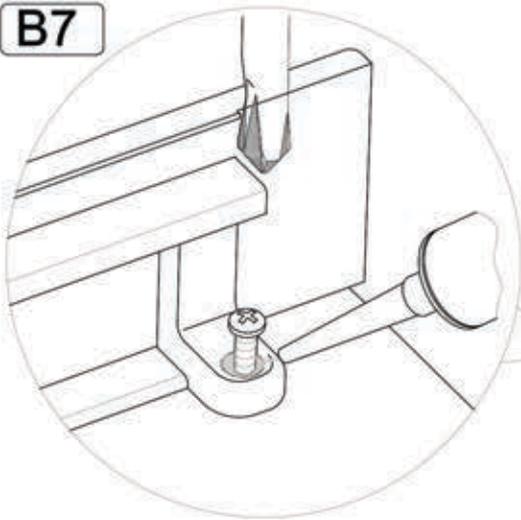


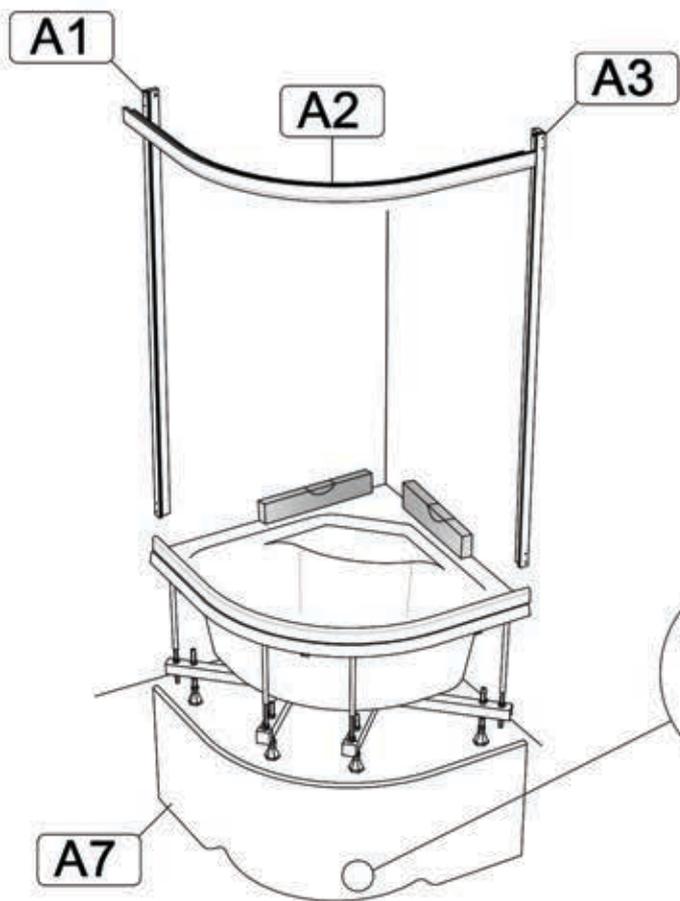


- A7
- B1
- B2
- B3
- B4

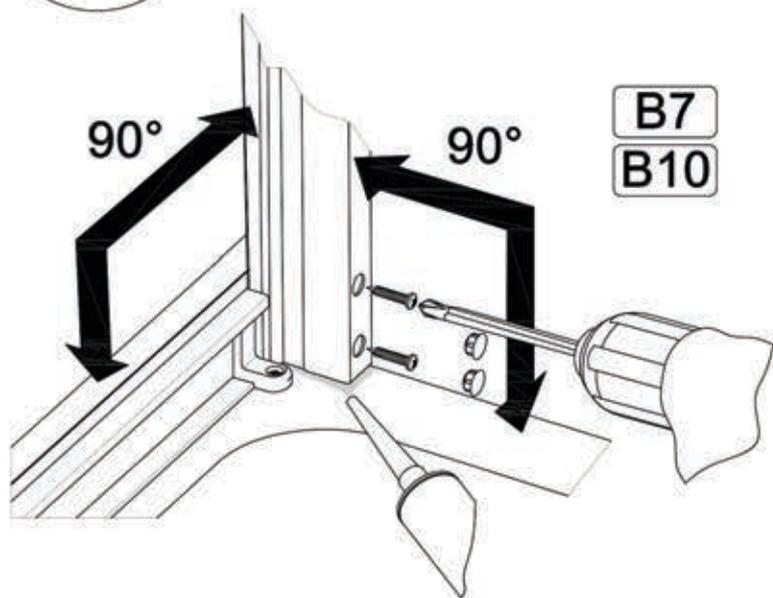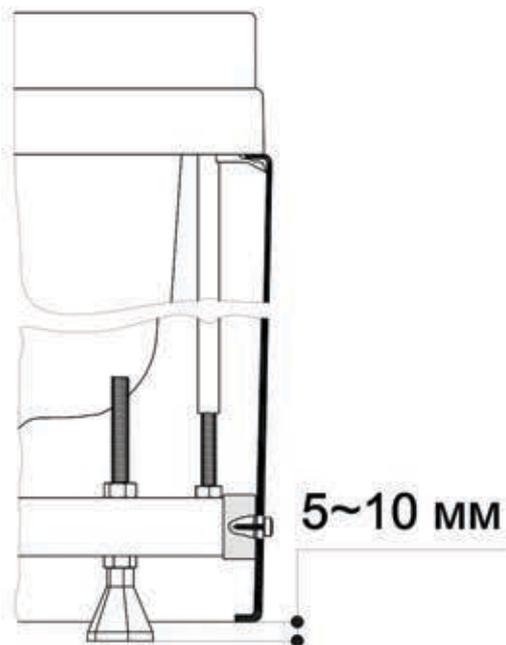


- B6
- B9
- B10



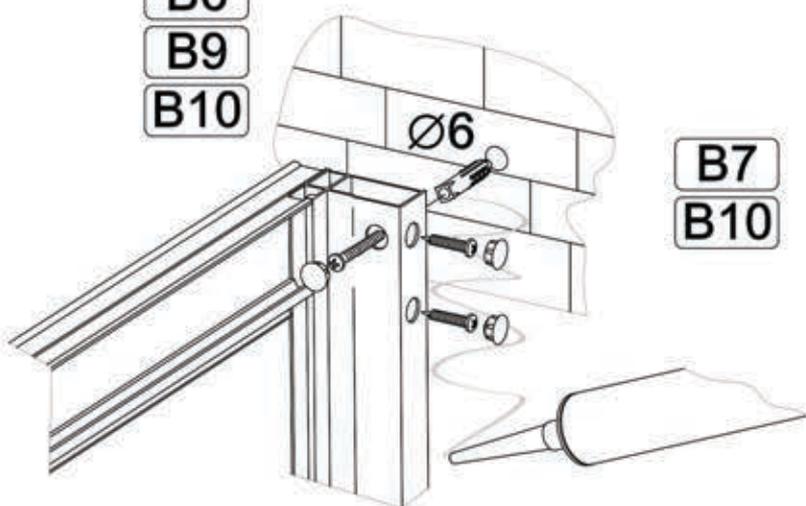


- B8
- B11

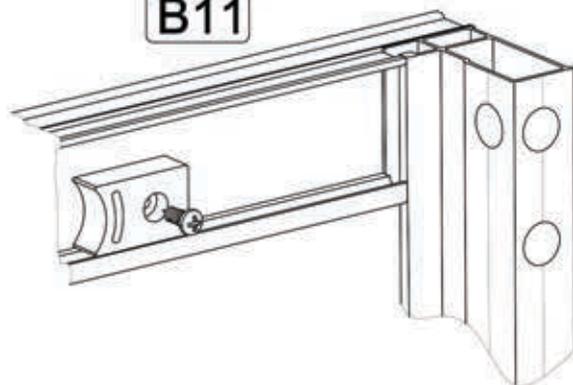




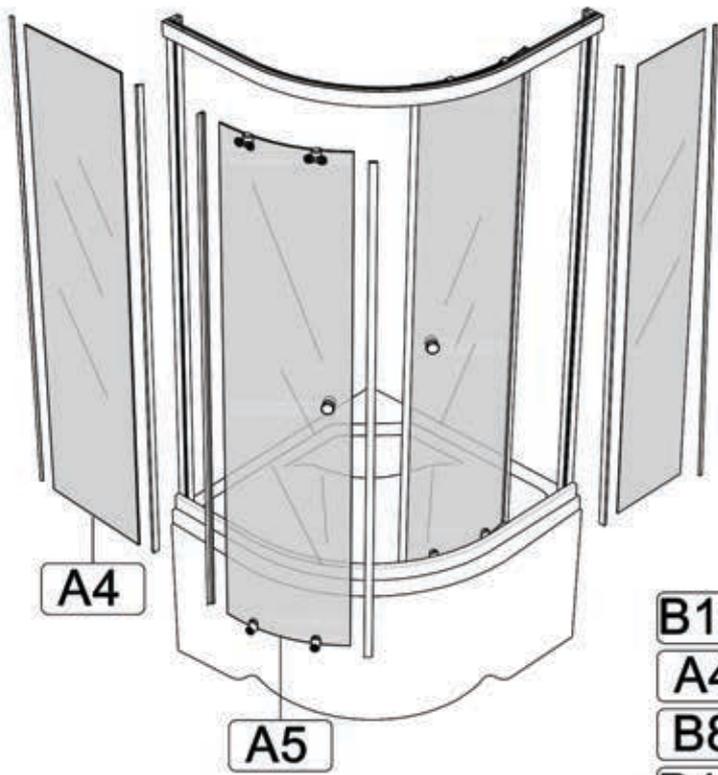


B16 ✂
 A4
 B8
 B12

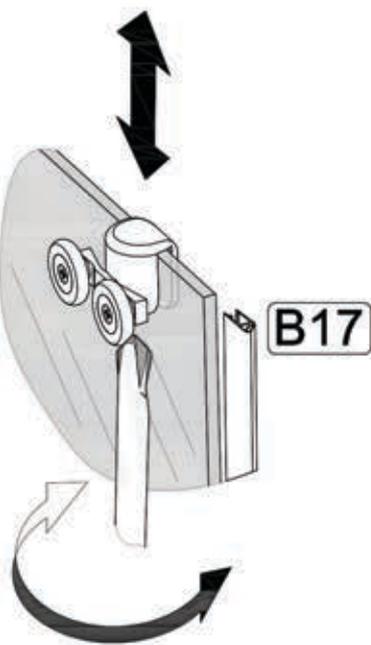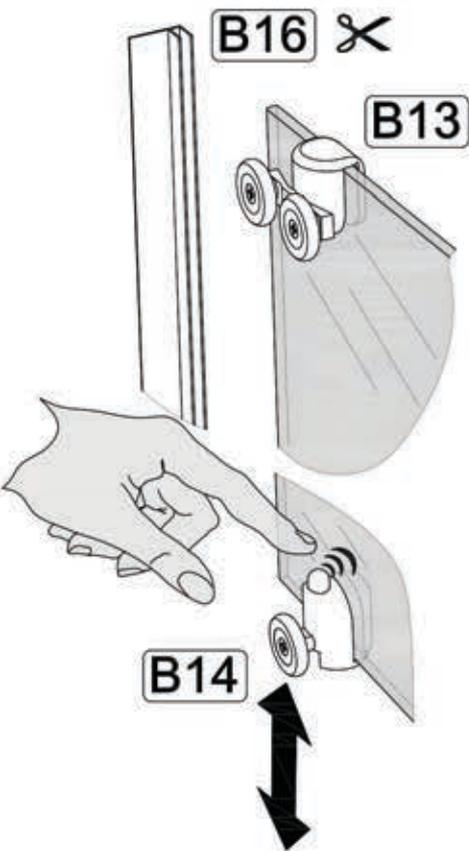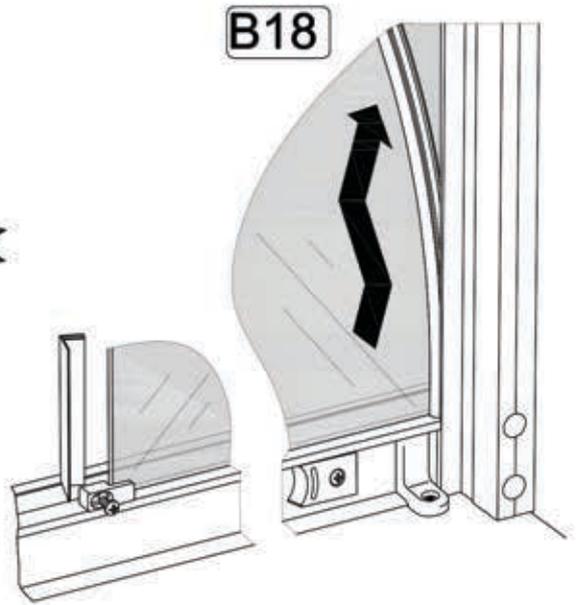

B8 = = B8
 B11 B11



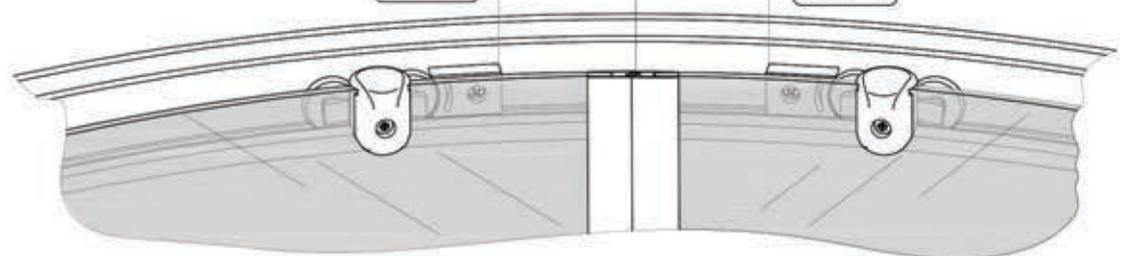


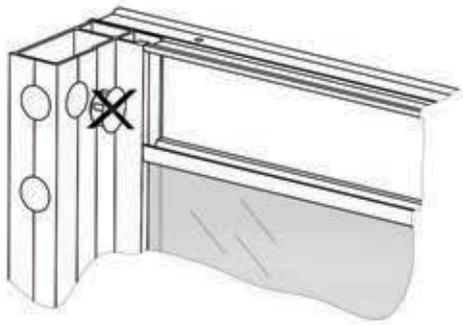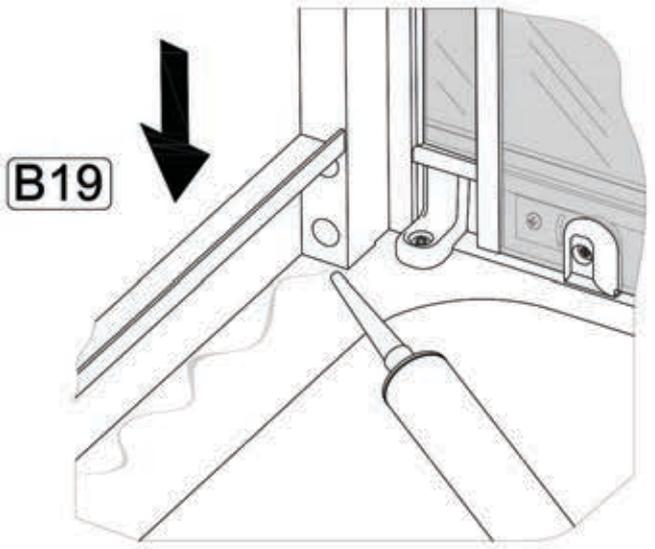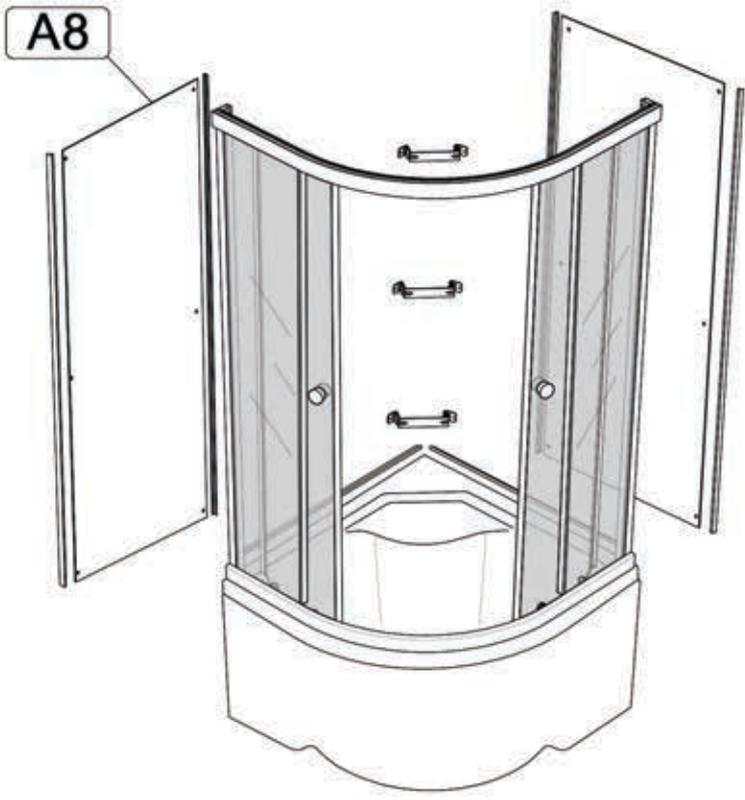


ДН 1

ДН 2


ДН 3

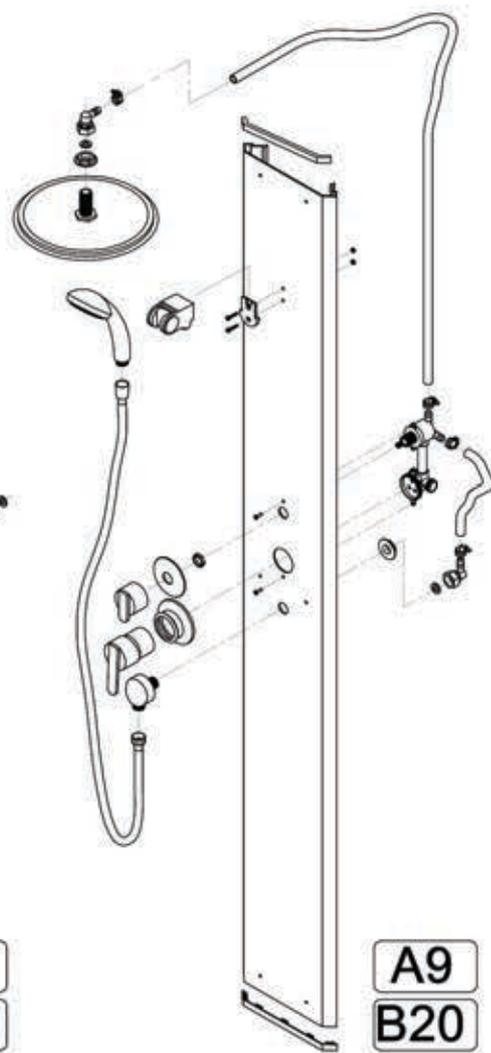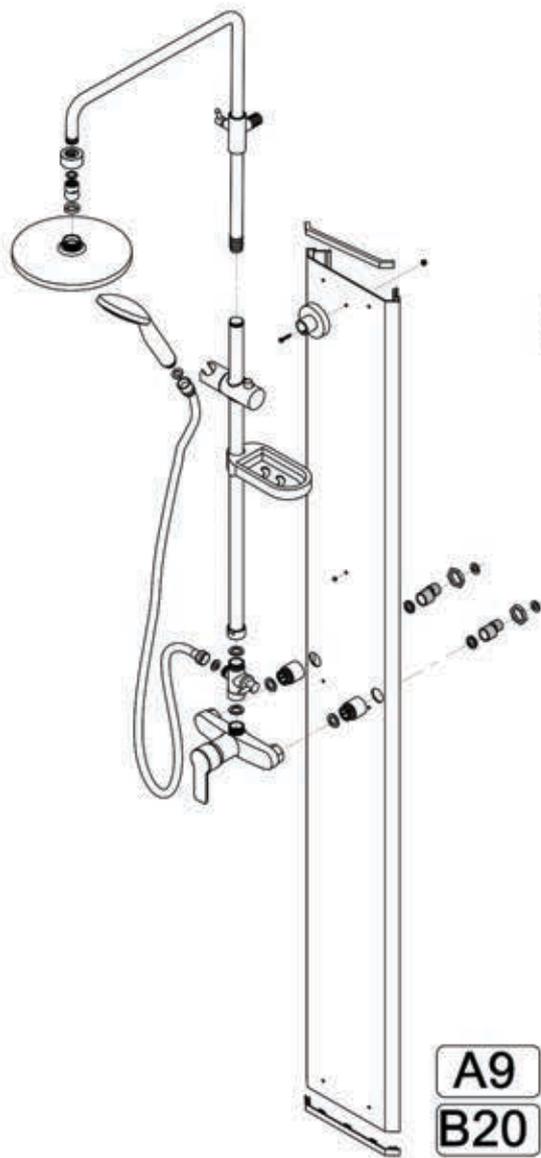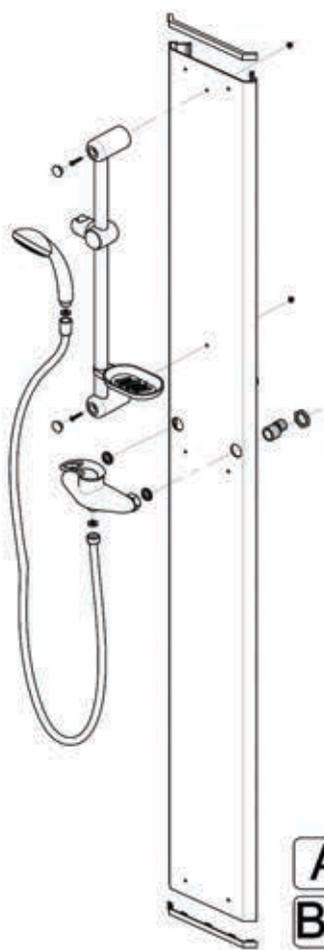

A8

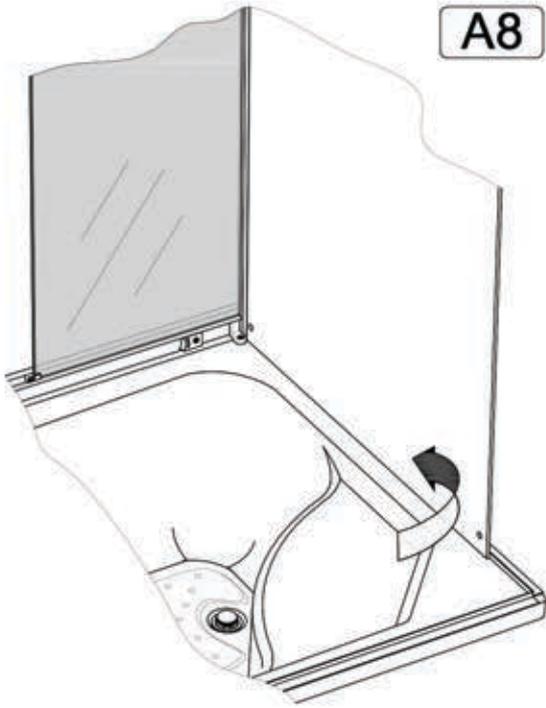


B30 ✂

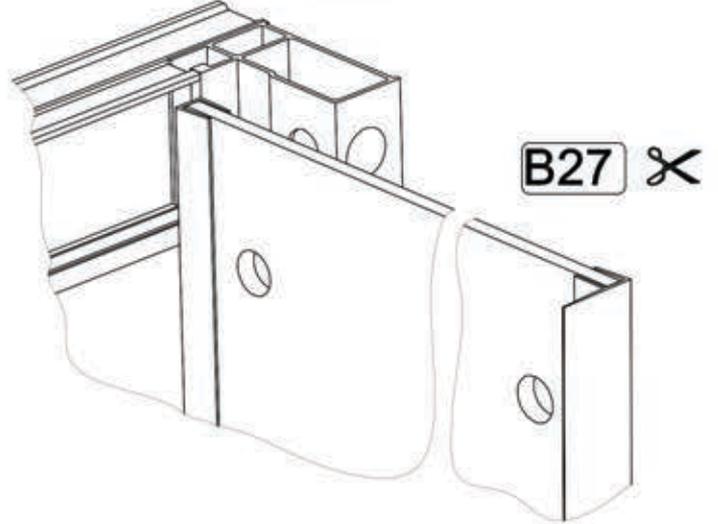


B27 ✂

B21
B23
B24

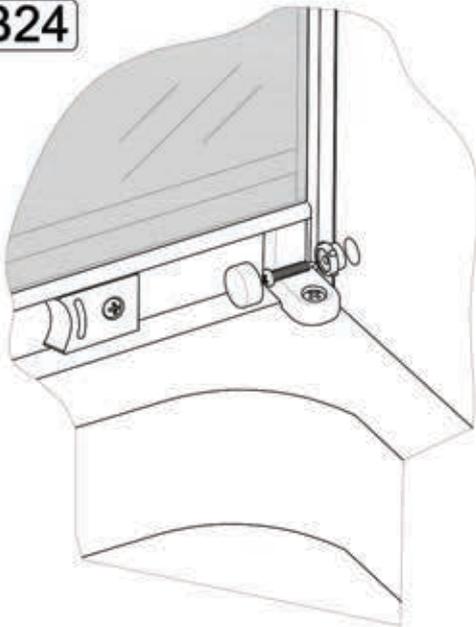



B22 B26
B25 B28

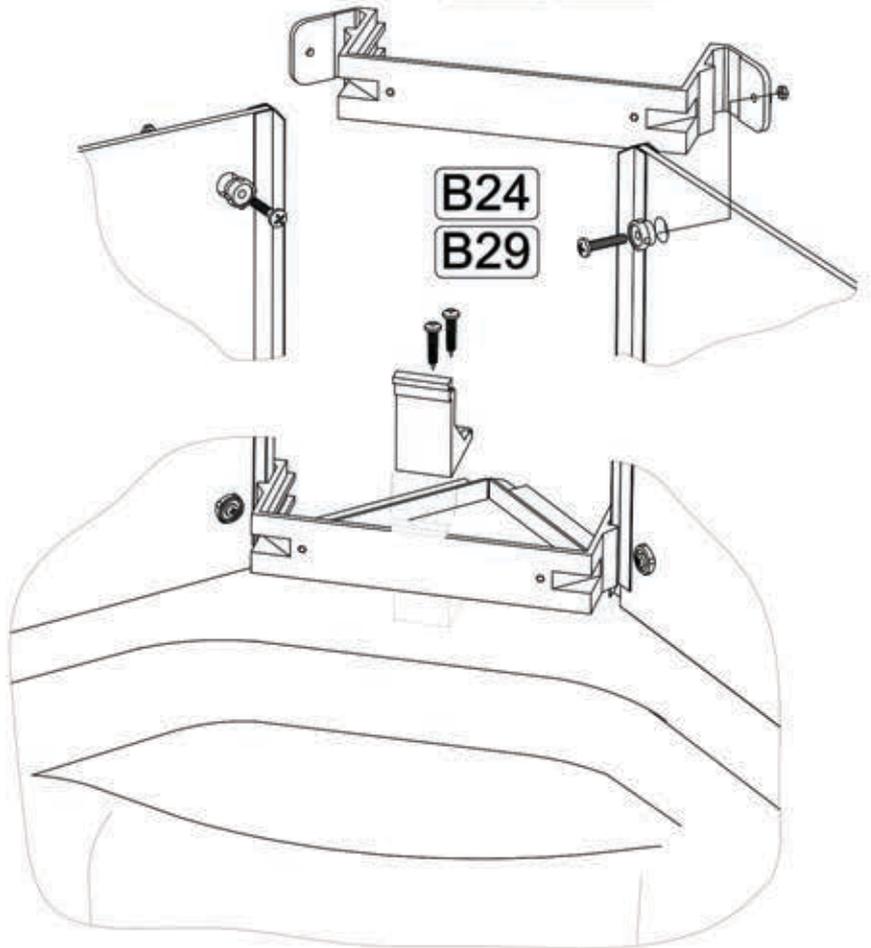

B31


B32




A10

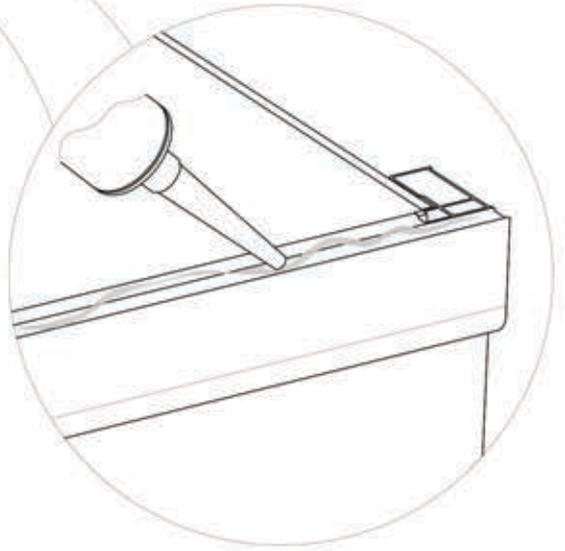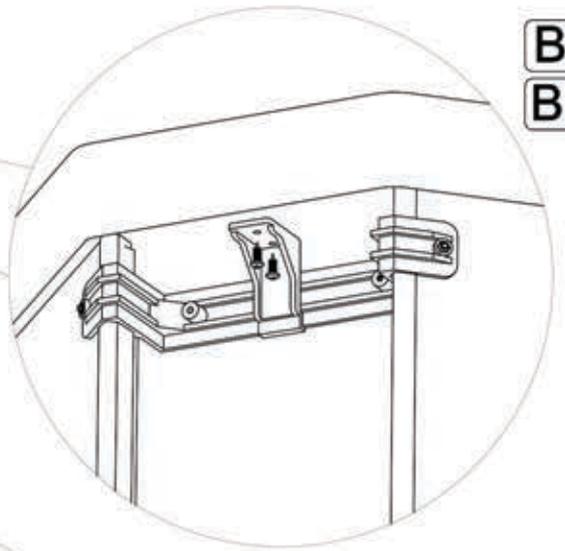

A10

B32

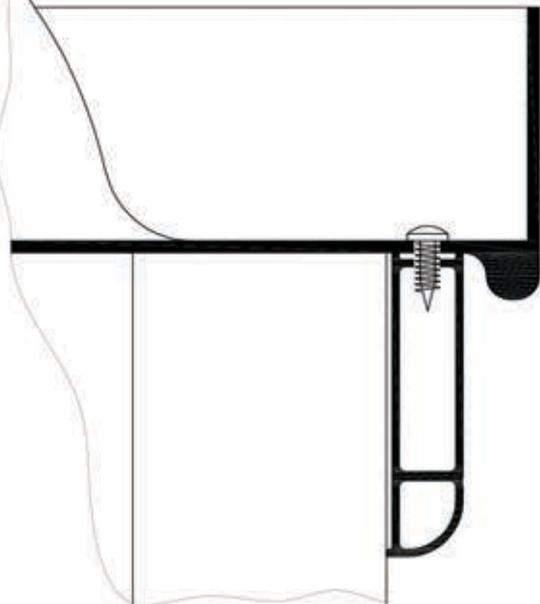

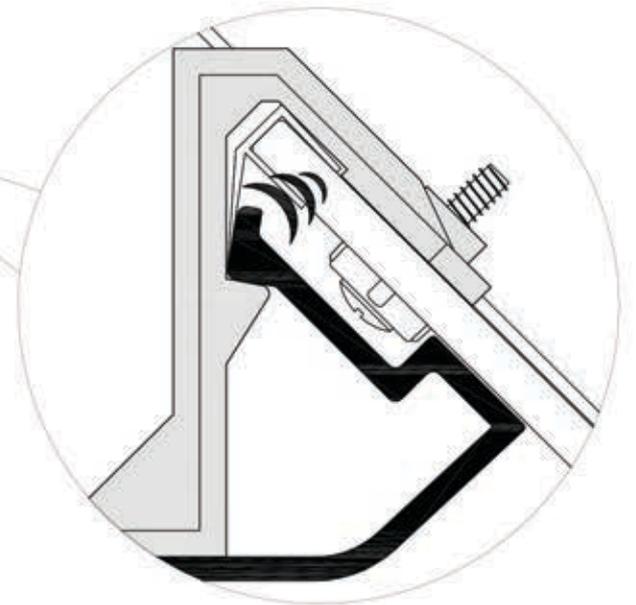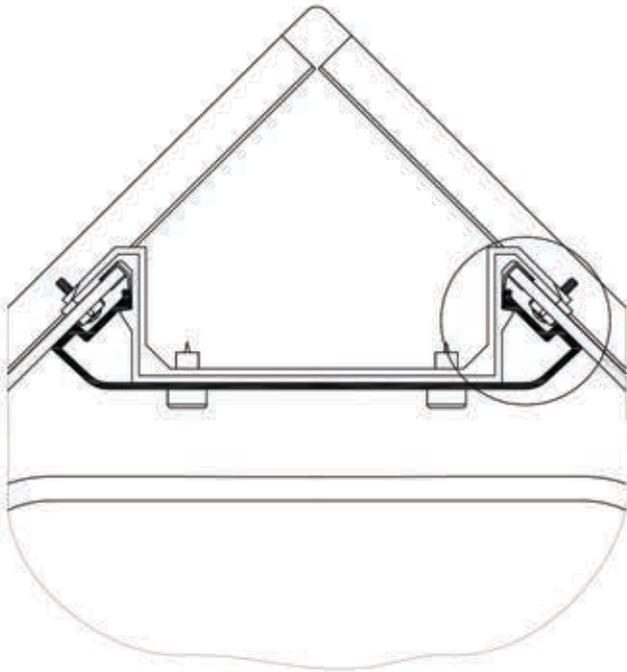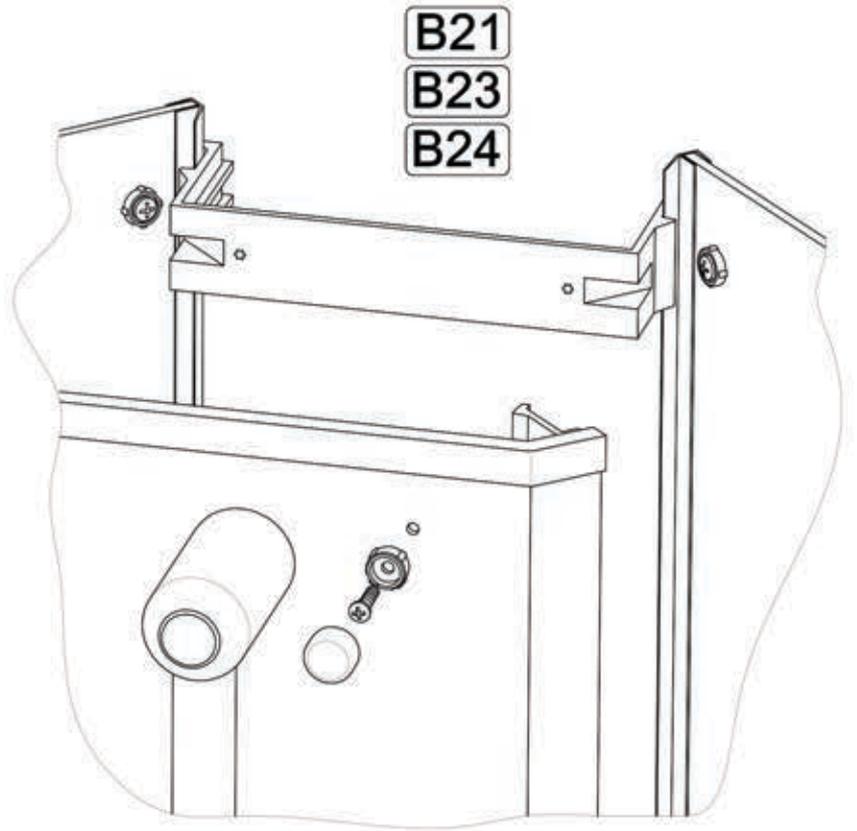

www.3tn.ru